



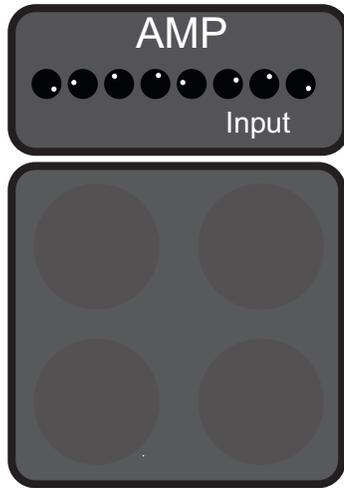

Loop 2

Loop 1

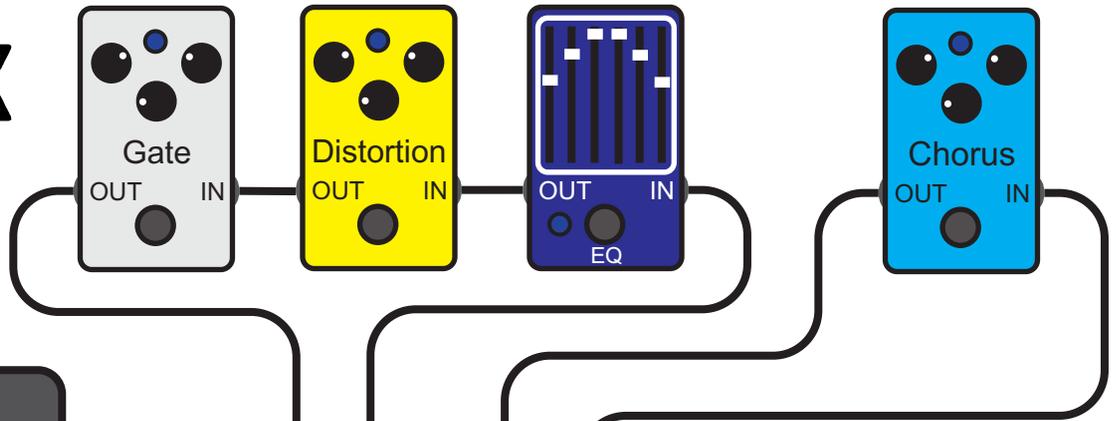


Alternate Idea:

If you push the Mode Switch in, The Tip to Ground connection will "toggle" Between loop 1 and 2 with Loop 1 being default This is helpful when you wanna "marry" a loop to each amp channel or if you wanna "toggle" between 2 loops with 1 button press You need a mono 1/4" cable for this setup

Mode switch OUT
(Mode LED OFF)

1/4" TRS Stereo Cable →

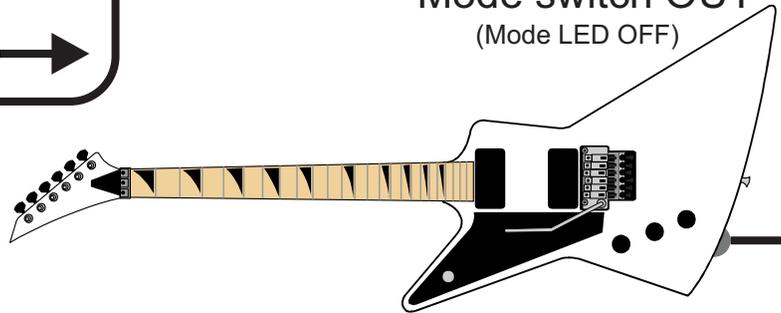


Set each loop status within Presets on the FCB-1010

The presets can be recalled via Midi program changes as well as individually with midi CC#'s

Your guitar signal does not travel through the wire between the FCB1010 and the Tap Dance™

We have no affiliation with Behringer and use the FCB-1010 name only as a product the Tap Dance is compatible with

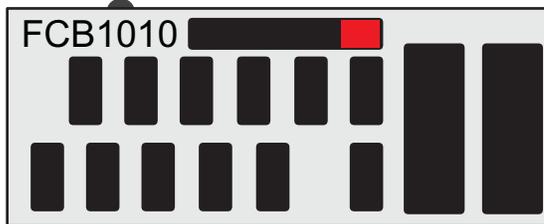

Discrete mode