



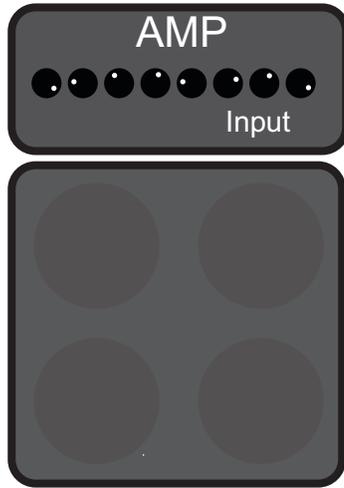

Loop 2

Loop 1

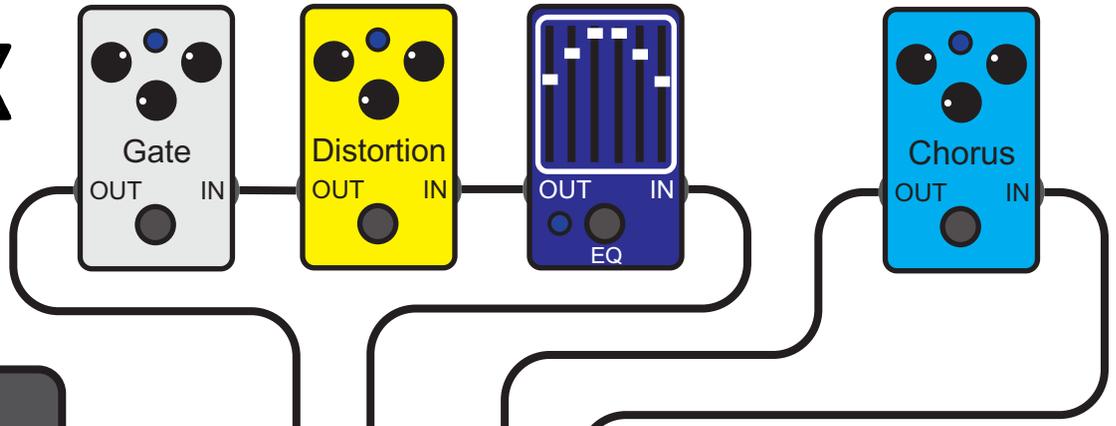


Alternate Idea:

If you push the Mode Switch in, The Tip to Ground connection will "toggle" between loop 1 and 2 with Loop 1 being default This is helpful when you wanna "marry" a loop to each amp channel or if you wanna "toggle" between 2 loops with 1 button press You need a mono 1/4" cable for this setup

Mode switch OUT (Mode LED OFF)

1/4" TRS Stereo Cable

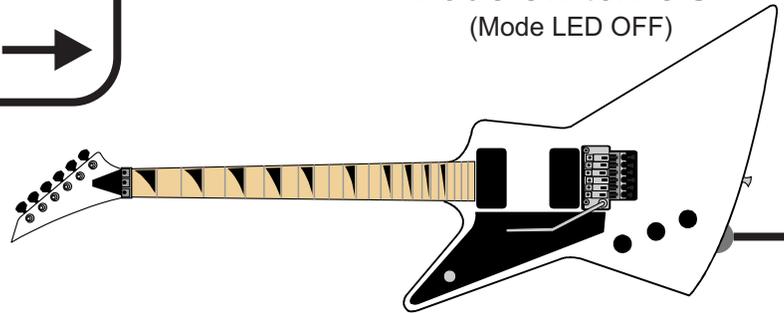

Set each loop status within Presets on the G-System

With the Tap Dance™ you gain 2 audio loops in addition to the 4 the G-System already provides

The G-System loops can be pre-amp, while the Tap Dance™ loops can be in the amp's fx loop, or vice-versa



Discrete mode

We have no affiliation with TC Electronics and use the G-System name only as a product the Tap Dance is compatible with